

## Installation Instructions: Sram solid pin type

### Tools Needed

- T25 Torx
- Punch Pin
- Small Hammer
- Small Needle Nose Pliers
- Regular Pliers

### Step 1

Using T25, loosen brake lever, rotate on bars to access pin



### Step 2

Using pin punch and hammer drive out pin - there is an internal snap ring requiring a sharp hit to dislodge



### Step 3

Be careful not to lose any parts and remove entire assembly from lever body, set cam and spring aside



### Step 4

Hold bottom of adjust screw with needle nose and unthread knob.




### Step 5

Unthread screw and remove all parts



### Step 6

Re-install spring, barrel and adjustment screw into new lever. Hold bottom with needle nose pliers and install Hexagon adjust knob

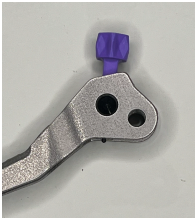

### Step 7

Install Cam and spring into new lever and place into brake lever



### Step 8

Ensure spring arm is not trapped inside lever body



### Step 9

Once hole is aligned using a hammer set pin back through all parts



### Step 10

Rotate lever back to normal position and set reach



Disclaimer: Hexagon Components is not liable for damage to bike due to improper installation, if in doubt please take your bike to a qualified bike shop technician