

## Installation Instructions: Shimano Deore, XT, XTR and Saint

### Tools Needed

- 4mm Allen Wrench
- 2.5mm Allen Wrench
- Small pick
- Punch and hammer

### Step 1

Using 4mm, loosen brake lever, rotate on bars to access pin



### Step 2

Using the pick remove the rubber plug



### Step 3

Use 2.5mm allen wrench to loosen set screw 2-3 turns



### Step 4


Remove pin by pushing from the back side out with a tool or possibly with small punch and hammer



Take care not to loose spring

### Step 5

Loosen adjust knob on new lever most of the way.

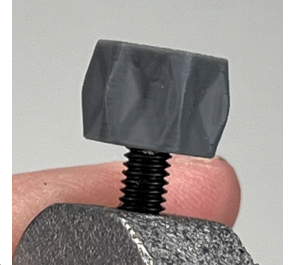

### Step 6

Install spring on new lever and place cam into lever body with longer side pointing out



Note, reverse installation of cam will result in damage to brake body

### Step 6a

For XTR use included boots on both sides of the lever body and use included spring, install the cam from Step 6.



### Step 6b

For Saint use included boots on one side of the lever body and re-use spring and cam from stock lever



### Step 7

Align new lever assembly in brake body and push pin through all parts



### Step 8

Using 2.5mm allen wrench tighten set screw in bottom of cam



### Step 9

Rotate lever back to normal position and set reach using adjuster



Disclaimer: Hexagon Components is not liable for damage to bike due to improper installation, if in doubt please take your bike to a qualified bike shop technician