

Installation Instructions: Shimano Deore, XT, XTR and Saint

Tools Needed

- 4mm Allen Wrench
- 2.5mm Allen Wrench
- Small pick
- Punch and hammer

Step 1

Using 4mm, loosen brake lever, rotate on bars to access pin



Step 2

Using the pick remove the rubber plug



Step 3

Use 2.5mm allen wrench to loosen set screw 2-3 turns




Step 4

Remove pin by pushing from the back side out with a tool or possibly with small punch and hammer



Step 5

Loosen adjust knob on new lever most of the way.

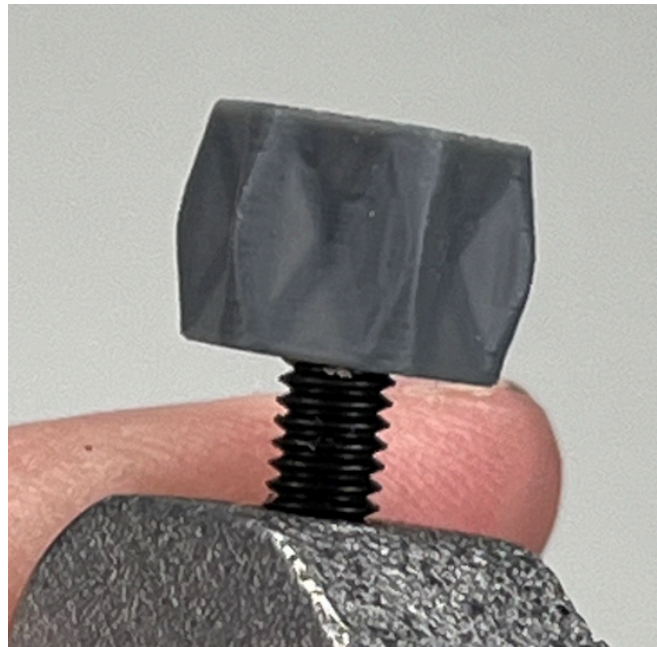

Step 6

Install included spring on new lever and place cam into lever body with longer side pointing out



Note, reverse installation of cam will result in damage to brake body

Step 6a

For XTR use included boots on both sides of the lever body and use included spring, install the cam from Step 6.



Step 6b

For Saint use included boots on one side of the lever, included spring and re use cam from stock lever



Step 7

Align new lever assembly in brake body and push pin through all parts



Step 8

Using 2.5mm allen wrench tighten set screw in bottom of cam



Step 9

Rotate lever back to normal position and set reach using adjuster

