

Installation Instructions: Sram hollow pin type

Tools Needed

- T25 Torx
- T8 Torx Driver
- Small Needle Nose Pliers
- Regular Pliers
- Small Punch

Step 1

Using T25, loosen brake lever, rotate on bars to access pin



Removing the grip can help

Step 2

Using T8 Torx driver loosen the set screw in the cam 2 turns



Step 3

Press pin out with fingers or a small punch



Step 4

Be careful not to lose any parts and remove entire assembly from lever body, set cam and spring aside



Step 5

Hold bottom of adjust screw with needle nose and unthread knob.



Step 6

Unthread screw and remove all parts



Step 7

Re-install spring, barrel and adjustment screw into new lever. Hold bottom with needle nose pliers and install Hexagon adjust knob




Step 8

Install Cam and spring into new lever and place into brake lever



Step 9

Once hole is aligned push pin back through all parts and tighten set screw

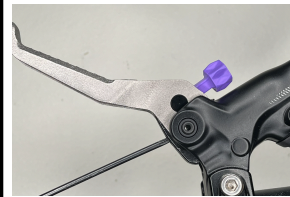

Step 10

Rotate lever back to normal position and set reach



Disclaimer: Hexagon Components is not liable for damage to bike due to improper installation, if in doubt please take your bike to a qualified bike shop technician